




NELSON ADAMS NACO
420 S. EST.
SAN BERNARDINO CA 92401

NOTE: DO NOT SCREW ON
BACK WALL OF POCKET!!
WILL DAMAGE TABLE &
BENCH CAN ALSO DAMAGE
LAMINATE

DSM-9TB POCKET INSTALLATION

SUGGESTED INSTALLATION INSTRUCTIONS FOR DSM POCKETS

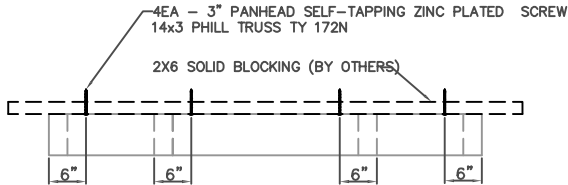

POCKET DSM-9TB PLAN VIEW

NELSON ADAMS NACO

NOTE: IT IS THE RESPONSIBILITY OF THE CUSTOMER TO FURNISH THE REQUIRED FASTENERS.

A) ALL POCKETS NEED TO BE DRILL IN THE FIELD BEFORE INSTALLING. USE A $\frac{1}{4}$ " DRILL BIT TO DRILL HOLES INTO POCKET SEE ELEVATION FOR HOLE LOCATIONS.

B) RECOMMENDED FASTENERS FOR WOOD SOLID BLOCKING: USE 4EA - 3" PANHEAD SELF-TAPPING ZINC PLATED SCREW OR EQUAL WHERE REQUIRED.

C) RECOMMENDED FASTENERS FOR CONCRETE OR MASONRY: USE 4EA - 18-8 STEEL FLAT PHILLIPS SCREW $\frac{1}{4}$ " DIA. x $\frac{3}{4}$ " CLIMASEAL OR EQUAL WHERE REQUIRED.


D) USE THE PROPER FASTENERS FOR EVERY CONDITION

E) WARRANTY WILL BE VOID IF INSTALLATION IS NOT DONE CORRECTLY OR PERFORMED BY A CERTIFIED INSTALLER.


F) AFTER POCKET INSTALLATION VACUUM OR CLEAN ALL METAL SHAVINGS WIPE DOWN THE BACK OF POCKET UNTIL IS COMPLETELY CLEAN

G) POCKET SHOULD BE READY TO ACCEPT ALL TABLES AND BENCHES.



SEE PLAN VIEW FOR SPECIFIC FASTENER LOCATIONS.




" BLUE

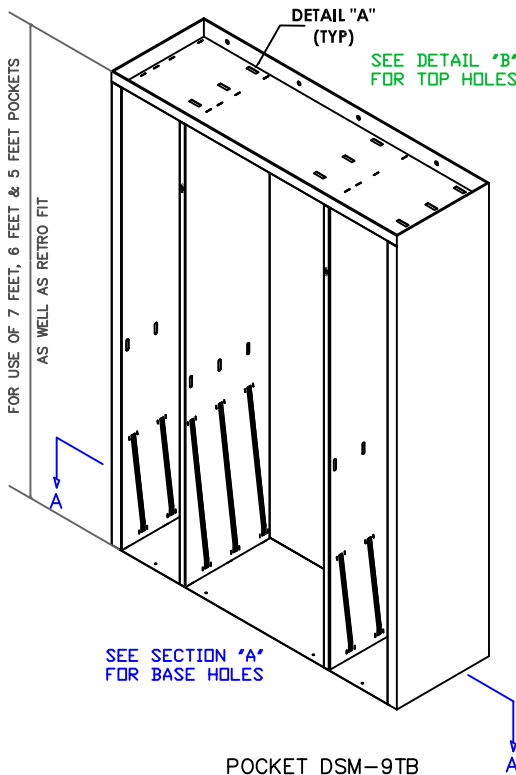

POCKET DSM-9TB

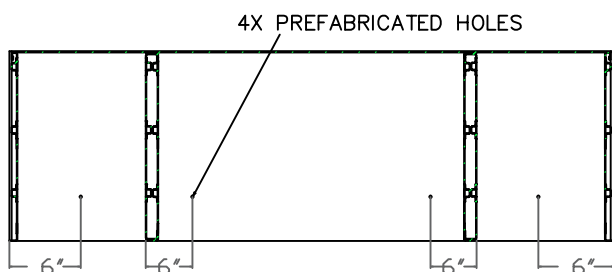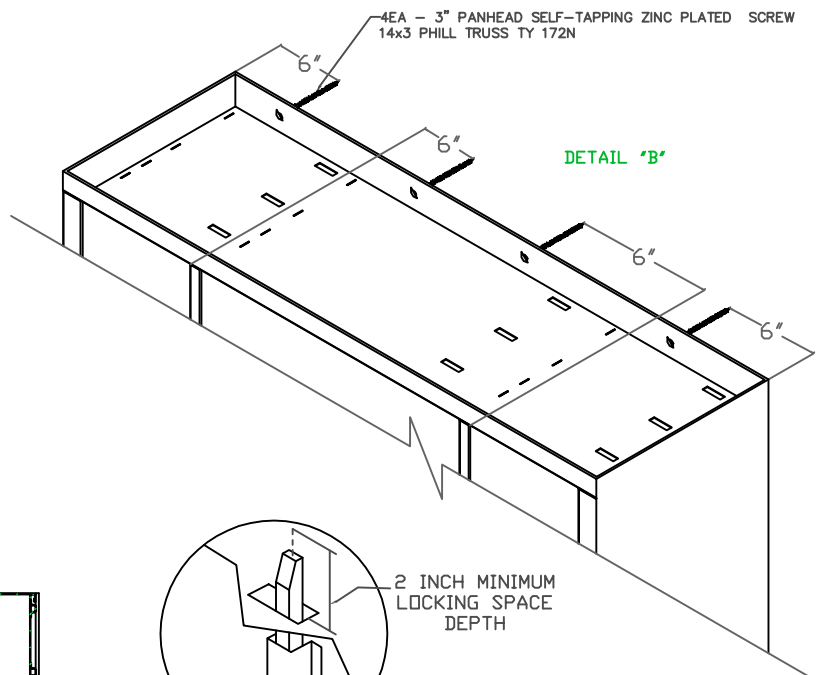

SECTION A'

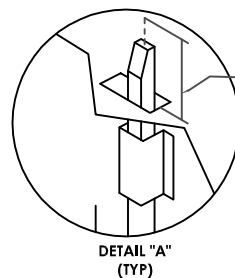

DETAIL A' (TYP)

check us out online at: www.nelsonadamsnaco.com